



MMR LOW OIL TEMPERATURE THERMOSTAT

Product part number: MMR17-0101

Please take the time to read these instructions thoroughly before proceeding. When performing the installation, read the entire numbered instruction before working on the car. If you feel that you do not have the requisite skill, please arrange for a qualified mechanic to perform the installation.

Ease of Fitment:

(the greater the star rating the easier the installation.)



Required Tools:

- 5mm Allen Key


Included in the box:

- x1 Low Temp Thermostat



STEP 1

Firstly you will need to remove the front cap for the oil thermostat cover. To do this, use a 5mm Allen Key and remove the two bolts shown on the picture.

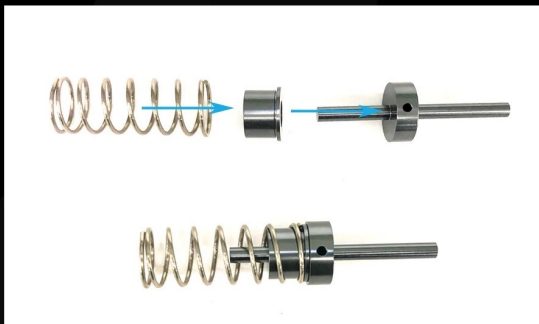

STEP 2

Once the over has now been removed you can now prepare the MMR low Temperature Thermostat, to do this insert the spring housing onto the smaller side of the thermostat. Now the spring housing is on the thermostat you can now insert the spring into the housing.

Now the MMR Low Temperature Thermostat is ready to be inserted into the housing.



STEP 3

Once the MMR Low Temperature Thermostat has now been assembled you can now re-insert it into the thermostat housing.

To do this simply insert the longer end of the thermostat is going into the housing and the spring is facing outward.

Finally, re-insert the front cap and re-install the two bolts.

