


OIL FILTER | BMW B58 | HIGH PERFORMANCE REPLACEMNT

Product part number: MMR17-1502

Please take time to read these instructions thoroughly before proceeding. When performing the installation, read the instructions fully before working on the car. If you feel that you do not have the requisite skills or tools/facilities, please arrange for a qualified technician to perform the installation.

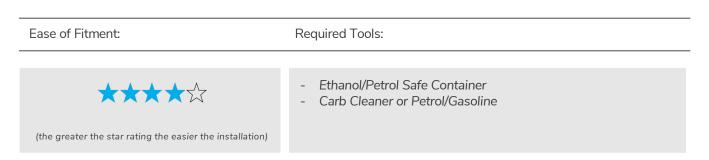

Filter Cleaning Procedure :

- 1. Remove MMR Oil Filter from filter housing.
- 2. Remove 3x (2x Internal and 1x External) O-Rings from MMR Oil Filter prior to Step 3, as fuel/carb cleaner will degrade and cause damage to these rubber/Viton components.
- 3. Soak in one of the following fluids for 5-10 minute ;
- Petrol/Gasoline
- Carb Cleaner
- Soap and Water
- 4. Agitate/Stir every few minutes until the outer surface is free of any engine debris.
- 5. Dry filter using compressed air, blow air through the filter, (Do not press the compressed air gun against the filter, keep at least a 10mm gap from nozzle to filter) starting from the inside out, then at a 30 to 45° angle on the outside of the screen to further remove any remaining debris or cleaning solution.
- 6. Once dry, reinstall O-Rings (MMR advices replacement of these O-Rings every oil service) and refit into oil filter housing and engine.

