

## MMR BILLET OIL FILTER HOUSING KIT

Product part number: MMR03-0101

Please take the time to read these instructions thoroughly before proceeding. When performing the installation, read the entire numbered instruction before working on the car. If you feel that you do not have the required skill, please arrange for a qualified mechanic to perform the installation.

### Ease of Fitment:

(the greater the star rating the easier the installation.)



### Required Tools:

- 30mm Socket
- Oil Filter Housing Removal Tool
- Torque Wrench

### Included in the box:

- x 1 Billet Oil Filter Housing
- x 1 MMR Logo Inset



### STEP 1

Using the correct Oil Filter Housing removal tool loosen and remove the OEM plastic oil filter housing.

*Please be aware that oil will leak from here when the housing is removed*



### STEP 2


Now the OEM Filter Housing has been removed, you can now remove the oil filter. It should now look like the picture shown on the left.



### STEP 3

Once the oil filter has been removed you can now remove the plastic insert that holds the oil filter. To do this place the filter housing on its face and gently pull and twist the insert until it is free from the housing.

*Please note there is a spring at the bottom of the housing, this will need to be transferred into the new housing.*

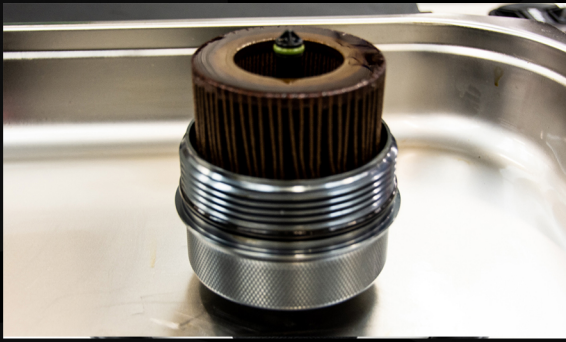

#### STEP 4

Now the plastic insert has been removed from the OEM housing, it can now be transferred into the new Billet MMR Housing. To do this simply push the insert into the center of the MMR Housing. It should click into place when secure.

Once the plastic insert is in place you can now reinsert the oil filter back into the new housing.

**Please note you will need to transfer the old or insert a new seal onto the new MMR Oil Filter Housing.**



#### STEP 5

Now the oil filter is back in the oil filter housing the MMR housing can now be placed back on the car. To do this start the thread by hand, then using a 30mm socket and a torque wrench, Torque the oil filter housing to the required 25nm.

Finally now you can insert the MMR logo onto the housing. To do this, peel off the double sided 3M tape and press the piece into the desired location.